

## Sony 1

A2618, A2628, F500i, J210i, J300, K300i, K500i, K508, K600i, K608i, K700i, P800, P900, P910i, R310, R320, R380, R520, R600, S700i, T100, T20, T200, T230, T28, T29, T290, T300, T310, T39, T600, T610, T630, T66, T68, V600, V600i, V800, Z1010, Z200, Z500, Z600, Z800i



## Sony 2

D750i, J100i, J110i, J120i, J220i, J230i, K200i, K220i, K310i, K320i, K510i, K530i, K550i, K610i, K618i, K630i, K660i, K750i, K770i, K800i, K810i, K850i, M600i, P1i, P990i, S500i, S600i, T250i, T280i, T650i, V630i, W200i, W300i, W380i, W550i, W580i, W610i, W660i, W700i, W710i, W760i, W800i, W810i, W850i, W880i, W890i, W900i, W910i, W950i, W960i, W980, Z250i, Z310i, Z320i, Z520i, Z530i, Z550i, Z555i, Z610i, Z710i, Z750i, Z770i, Z780i, Z800i, C702, C902, G502, G700, G900, R300, R306, T303, V640i



## Samsung 1

A300, A400, A800, C100, C110, C120, C300, D410, D500, D600, E300, E310, E330, E350, E370, E400, E600, E620, E630, E640, E700, E710, E730, E760, E770, E800, E820, N620, P400, P510, R210, R210S, S300, S400i, S500i, T100, V200, X100, X450, X460, X480, X510, X600, X640, X660, X700



## Samsung 2

D510, D520, D800, D820, D830, D840, D900, D900i, E250, E390, E570, E590, E780, E840, E870, E900, i600, J600, P300, P310, U100, U300, U600, U700, X820, X830, Z150, Z400, Z510, Z540, Z560, Z720, ZV40, i620, M300, E590



## Nokia 1

1100, 1101, 1110, 1110i, 1112, 1600, 2100, 2300, 2310, 2600, 2610, 2626, 2650, 2652, 3100, 3120, 3200, 3210, 3210e, 3220, 3230, 3300, 3310, 3330, 3410, 3510, 3510i, 3650, 3660, 5100, 5110, 5140, 5140i, 5210, 5510, 6020, 6021, 6030, 6060, 6100, 6110, 6150, 6170, 6210, 6220, 6230, 6230i, 6260, 6310i, 6510, 6600, 6610, 6610i, 6630, 6650, 6670, 6680, 6681, 6800, 6810, 6820, 6822, 7110, 7200, 7210, 7250, 7250i, 7260, 7270, 7280, 7380, 7600, 7610, 7650, 7700, 7710, 8210, 8310, 8800, 8850, 8890, 8910, 8910i, 9210i 9300, 9300i, 9500, 9500, E60, E70 N-Gage, N-Gage QD



## Nokia 2

1200, 1208, 1650, 2600 Classic, 2630, 2760, 3109, 3110 Classic, 3250, 3500 Classic, 5070, 5200, 5300, 5310, 5500 Sport, 5610, 5700 Music, 6070, 6080, 6085, 6086, 6101, 6103, 6110 Navigator, 6111, 6120 Classic, 6125, 6131, 6136, 6151, 6233, 6234, 6270, 6280, 6288, 6290, 6300, 6301, 6500 Slide, 7360, 7370, 7373, 7390, 7500 Prism, 8800 Sirocco, E50, E51, E61, E65, E90, N70, N71, N72, N73, N76, N77, N80, N81, N82, N90, N91, N92, N93, N93i, N95, N95 8GB



## Motorola

A1000, A835, A920, A925, C975, C980, E1000, E398, E550, MPX220, Roker E1, T280, T280i, T720, T720i, V1050, V300, V500, V525, V535, V545, V547, V550, V60, V600, V60i, V620, V635, V66, V66i, V80, V975, V980, V70, A830, E390



## Mini USB

### Motorola

A780, E1070, E770v, K1, L2, L6, L7, PEBL, U6, V230, V235, V3, V360, V3i, V3im, V3x, W375, Z3 RIZR, Z8 RIZR, A910, maxxV6, K3, Z10

### Blackberry

6210, 6220, 6230, 6280, 6510, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130c, 7130e, 7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 8700c, 8700f, 8700g

And more.

